

DISHWASHER CLEANER DESCALER – 0730

A freeflowing dishwasher powder specially formulated to remove limescale and deposits during the wash cycle.

USES:

A freeflowing dishwasher powder specially formulated to remove limescale and deposits during the wash cycle.

DIRECTIONS:

Use 200 grams on a short cycle with the dishwasher empty.

TECHNICAL SPECIFICATION:

| | |
|------------------|-----------------------------------------------|
| Appearance | Cream powder |
| Odour | None |
| pH | ca 1.5 |
| Filling density | ca 1000 - 1100 g/l |
| Water solubility | High |
| Stability | Stable under normal conditions. Avoid Alkalis |

Safety: Keep out of the reach of children.

Contains Sulphamic Acid. Irritating to eyes and skin. Avoid contact with eyes and skin. Rubber gloves and eye/face protection are recommended.

If swallowed do not induce vomiting. Rinse mouth with water. Drink plenty of water and seek immediate medical attention, showing this label.

In case of contact with eyes rinse with plenty of water and seek medical advice.

After contact with skin, wash immediately with plenty of water.

